



Mobile Phone ACTIVE

Operating Manual





CONTENT

1.	For Your Safety.	7
1.1	Intended Use.	7
1.2	Observe Safety Instructions.	8
1.2.1	Tips Concerning the Battery.	11
1.3	Checking the Package Contents.	12
1.4	Accessories.	12
2.	Mobile Phone in Detail.	13
2.1	Front View.	13
2.2	Rear View.	15
3.	Putting the Mobile Phone into Operation.	17
3.1	Inserting SIM Cards.	18
3.2	Inserting a MicroSD Memory Card.	19
3.3	Inserting the Battery.	20
3.4	Charging the Battery.	21
3.4.1	Charging the battery, power adapter.	21
3.5	Switching the Mobile Phone On and Off.	22
3.6	Start Screen.	23
3.6.1	Other icons on the start screen.	24
4.	Using the Mobile Phone.	25
4.1	Making Calls.	25
4.2	Taking, Ending and Rejecting Calls.	25
4.3	Navigating in the Menu.	26
4.4	Entering Phone Numbers and Letters.	27
4.5	Quick Access.	29

5.	Mobile Phone Menu.	30
5.1	Display Texts.....	30
5.2	Basic Settings of the Mobile Phone.....	31
5.2.1	Setting the Language.....	31
5.2.2	Setting the time and date.....	31
5.3	Menu Options Available During a Call.....	32
5.3.1	Adapting the Volume During a Call.....	32
5.3.2	Handsfree Function.....	32
5.3.3	Muting the Microphone.....	33
5.3.4	Putting a Call on Hold.....	33
5.3.5	Conference Facility.....	34
5.4	Settings.....	35
5.4.1	Phone Settings.....	35
5.4.2	Call Settings.....	37
5.4.3	Call Number Blacklist.....	39
5.4.4	Answer mode.....	40
5.4.5	Security Settings.....	41
5.5	Network Settings.....	45
5.6	User Profiles.....	46
5.6.1	Activating the User Profile.....	46
5.6.2	Adapting the User Profile.....	47
5.6.3	Adapting Dual SIM Settings.....	48
5.6.4	Restoring the Default Factory Settings.....	49
5.7	Phone Book.....	50
5.7.1	Adding a contact.....	50
5.7.2	Phone Book Settings.....	52
5.7.3	Fixed Dialling Numbers with Blacklist.....	53
5.7.4	Fixed Dialling Number with Blacklist.....	54
5.8	Call History.....	55
5.8.1	Options for the Call lists.....	56

5.9	Messages.	59
5.9.1	Writing a Text Message.	60
5.9.2	Viewing a Text Message.	61
5.9.3	Replying to a Text Message.	61
5.9.4	Calling the Sender of a Text Message.	62
5.9.5	Forwarding a Text Message.	62
5.9.6	Deleting a Text Message.	63
5.9.7	Saving Phone Numbers in the Phone Book.	63
5.9.8	Saving a Text Message as a Draft.	64
5.9.9	Settings for Text Messages.	64
5.10	Multimedia	66
5.10.1	Camera.	67
5.10.2	Image Viewer.	68
5.10.3	Video Recorder.	69
5.10.4	Video Player.	70
5.10.5	Sound Recorder.	71
5.10.6	Audio Player.	71
5.10.7	FM Radio.	72
5.11	File Manager.	74
5.12	Torch.	74
5.12.1	Switch torch on/off.	75
5.13	Bluetooth.	75
5.13.1	Switching Bluetooth On/Off.	76
5.14	Tools.	77
5.14.1	Calendar.	78
5.14.2	Alarm clock.	79
5.14.3	Calculator.	81
5.14.4	World Clock.	82

6.	Other Important Information.	83
6.1	Technical Data.	83
6.2	Symbols.	84
6.3	Care Instructions.	84
6.4	Disposal.	85
6.5	Declaration of Conformity.	86
6.6	Manufacturer.	86
6.7	Warranty.	87
6.8	Frequently Asked Questions (FAQ).	88

1. For Your Safety

The information on the following pages will help to ensure you can use the mobile phone safely.



Read the operating manual carefully and pay attention to the information when using your mobile phone. Keep the operating manual in a safe place for future reference.



Pay attention to this symbol. Texts which are highlighted by this symbol provide helpful information on handling the mobile phone.



This symbol indicates warnings regarding certain situations which could lead to personal injuries or damage to the mobile phone.

1.1 Intended Use

The Active mobile phone, subsequently referred to simply as the phone, has been designed for telephoning within a telephone network.

The phone is only intended for use indoors and for private purposes.

Any other use is considered unintended use. Unauthorised modification or alterations are not permitted.

1.2 Observe Safety Instructions

Pay attention to the following safety instructions to protect yourself from any possible personal injury.



WARNING!

The mobile phone can be used by children from eight years of age and by persons with restricted physical, sensory or mental capabilities or a lack of experience and/or knowledge when they are under supervision or have been instructed with regard to safe use of the mobile phone and have understood the potential risks which result if the instructions are ignored. Children may not be allowed to play with the mobile phone. Cleaning and user maintenance may not be completed by children without any supervision.



WARNING!

Risk of electric shock! Never attempt to open and repair the mobile phone or accessories yourself. Never touch bare contacts with metallic objects. Never plug-in or unplug the power adapter when your hands are wet.



WARNING!

Risk of suffocation! Risk to health through packaging material and protective foil! Keep packaging material and protective foil out of reach of children. Small children can swallow small parts.



WARNING!

Risk of suffocation! Risk to health through batteries! Keep batteries out of reach of children. Do not swallow batteries. If a battery has been swallowed, contact medical assistance immediately.



WARNING!

Prevent life-threatening interference to heart pacemakers! Maintain a safety distance of at least 15 cm! Never carry the mobile phone in a breast pocket when switched on. Always hold the mobile phone to the ear furthest away from the pacemaker during calls. Switch the mobile phone off immediately if you notice or suspect any adverse effects.



CAUTION!

Do not remove the battery while the mobile phone is being charged. This could damage the phone. Disconnect the charging cable from the mobile phone before changing or removing the battery.



CAUTION!

Risk of explosion through improper replacement or removal of the lithium-ion battery! Only replace the lithium-ion battery by a type approved by the manufacturer.



CAUTION!

Risk of injury to the retina. The LED for the torch is very bright and could cause damage to eyes. Never look directly into the LED torch beam when the torch is switched on.



CAUTION!

The ring tone is issued via the loudspeaker. Take an incoming call first and then hold the mobile phone to your ear. This prevents any possible hearing damage.

OBSERVE SAFETY INSTRUCTIONS



CAUTION!

Do not use the phone in prohibited areas! Prohibited areas could include hospitals, petrol stations, aeroplanes, etc. Observe local regulations!



CAUTION!

Reduce exposure to radio waves! Use an appropriate headset for longer calls. Do not keep the mobile phone near your head.



CAUTION!

With regard to emergencies, do not rely on the mobile phone alone! For technical reasons, it is not possible to guarantee a reliable connection in every situation.

Prevent damage to your mobile phone and observe the instructions!



IMPORTANT!

Protect your mobile phone from moisture, dust, liquids, chemicals, vapours, heat and direct sunlight. The phone is only waterproof to a limited degree; therefore, keep it dry.



IMPORTANT!

Only use original accessories.



IMPORTANT!

The mobile phone may only be repaired by qualified customer services technicians.



IMPORTANT!

When using mobile communication equipment, interference can cause disturbances.



IMPORTANT!

Telephoning while driving is only permitted when the applicable legal regulations are observed.

1.2.1 Tips Concerning the Battery


The following tips and information help to ensure the mobile phone battery works properly.

- Only use batteries and power adapters approved by the manufacturer, otherwise the battery could be damaged.
- Do not short circuit the battery. Always leave the battery in the mobile phone to avoid accidentally short circuiting the battery contacts.
- Keep the battery contacts clean and free of dirt.
- The battery can be charged/discharged hundreds of times but its service life is limited. Replace the battery when the battery power has decreased noticeably.
- To prevent unnecessary power consumption via the power adapter plug, disconnect the power adapter plug from the power socket when the battery is not being charged.
- The battery only reaches its full capacity after several full charging processes.

1.3 Checking the Package Contents

Before starting up the mobile phone, check the package contents. The following are enclosed with the mobile phone supplied:

- ACTIVE mobile phone
- Rechargeable battery
- Power adapter
- Quick start guide
- Warranty card

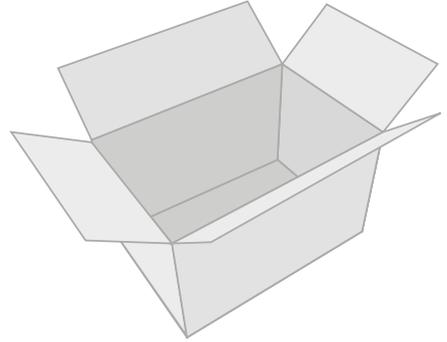

If anything is missing or damaged, please contact our Service Department.

1.4 Accessories

You can also order the optionally available headset, USB connection cable or replacement battery.

Please contact our service department for more information.

2. Mobile Phone in Detail

Familiarize yourself with the mobile phone before starting to use it.

2.1 Front View

The following diagrams illustrate the operating elements which you can use to exploit the functional scope of the mobile phone to the full.

- 1 Loudspeaker
- 2 Display
- 3 Left-hand softkey
- 4 Navigation and Confirmation key
- 5 Call key
- 6 Digit keys
- 7 Star key
- 8 MicroUSB connection port
- 9 Hash key
- 10 On-hook key
- 11 Right-hand softkey



2.2 Rear View

More elements are available on the rear side of the mobile phone which provide different functions to operate the mobile phone.


- 12 Battery compartment cover
- 13 Camera
- 14 Torch lamp (LED)
- 15 Loudspeaker
- 16 Recess



3. Putting the Mobile Phone into Operation

This chapter provides information on how to put your mobile phone into operation. Your mobile phone is ready for use in just a few steps.

 Before you start, please read the information in Section 1.2 Observe Safety Instructions on page 8.

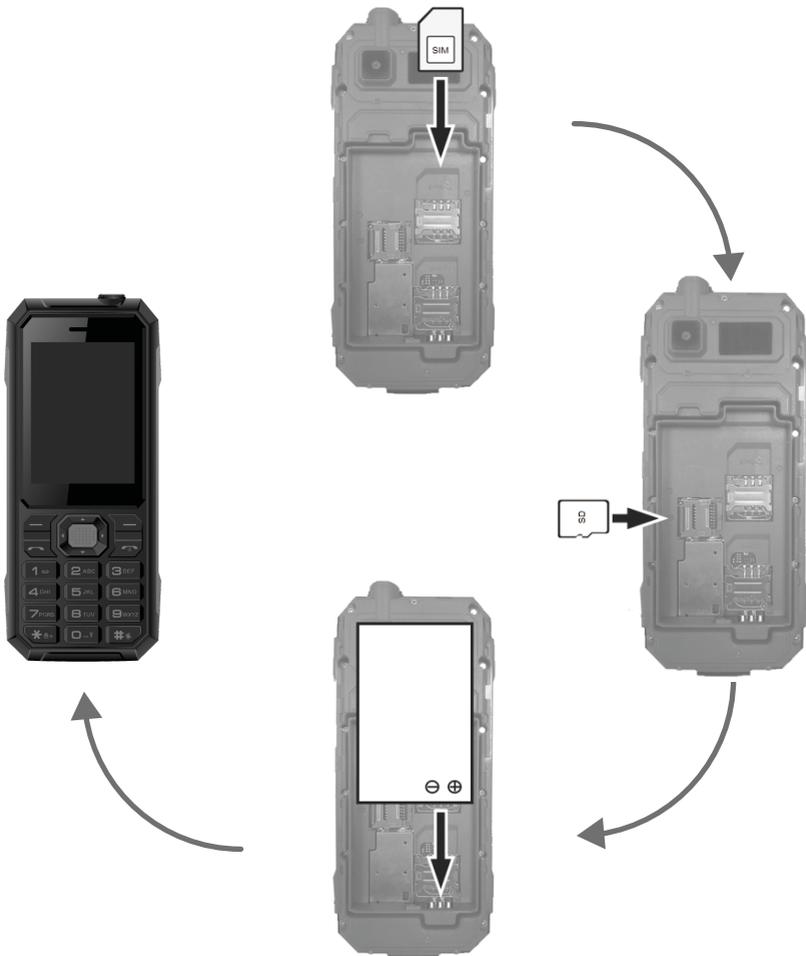

3.1 Inserting SIM Cards

Before you can use your mobile phone, you must insert your SIM card (not included).

Only use SIM cards of the size illustrated (micro SIM). Nano SIM cards which have already been broken out can cause contact problems or malfunctions. If you want to use a nano SIM card, you will need an appropriate adapter.

The battery compartment contains a shaped mould which indicates how to position and align the SIM card correctly in the compartment.

- 1 Open the battery compartment cover at the recess.
- 2 Remove the battery compartment cover.
- 3 Pull the plastic cover from the battery.
- 4 Remove the battery.
- 5 Insert the SIM card in one of the slots (Dual SIM) as illustrated.



The compartment shape makes it impossible to insert the card incorrectly.




3.2 Inserting a MicroSD Memory Card

A microSD memory card (not included in the equipment supplied) with a memory of up to 32 GB can be inserted, as an option, in the mobile phone. This increases the data volume (e.g. for photos) which you can store on your phone.

- 1 Place the microSD memory card with the contacts facing down in the compartment, as illustrated.

 The compartment shape makes it impossible to insert it incorrectly.

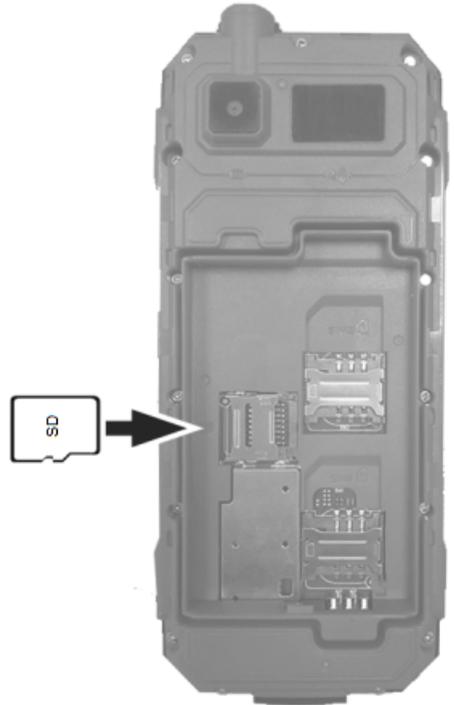

3.3 Inserting the Battery

Before you can use your mobile phone, you must insert the battery.

1 Insert the battery as shown.

 The compartment shape makes it impossible to insert it incorrectly.

2 Insert the plastic cover of the battery.

3 Replace the battery compartment cover.



3.4 Charging the Battery

Your mobile phone battery is fully charged after approx. 2 hours. Some batteries only reach their full capacity after several complete charge/discharge cycles. If the battery is fully discharged, it may take some time before the mobile phone switches on and displays the charging process.

Before starting to charge the battery, check that it has been installed properly.



IMPORTANT! Do not remove the battery while the battery is being charged. This could damage the mobile phone.

3.4.1 Charging the Battery, Power Adapter

- 1 Connect the power adapter plug to a properly installed power socket.
- 2 Remove the cover from the microUSB connection.
- 3 Connect the microUSB plug to the microUSB connection port on the mobile phone. Ensure that the microUSB plug is correctly aligned to the microUSB connection port when connecting it.
- 4 When the phone battery is fully charged, disconnect the connection to the power supply. This reduces power consumption.



The charging process is indicated in the display by means of a charging battery icon.

3.5 Switching the Mobile Phone On and Off

- 1 Press and hold the **On-hook key** for 3 seconds to switch the phone on.

 Some SIM cards will require you to enter a PIN code. Follow the instructions on the screen.

- 2 The display shows an animated graphic, followed by the start screen.

- 3 As soon as the display shows the name of your network operator, the phone has established a connection with the mobile phone network.

➔ Your mobile phone is now ready to use.

- 1 Press and hold the **On-hook key** for 3 seconds to switch the phone off.



3.6 Start Screen

The start screen is the standard display which appears when the mobile phone is switched on. The start screen shows you useful information.



You can open the start screen at any time by pressing the **On-hook key**.

- 1 Network availability
- 2 Time
- 3 Date
- 4 Network operator
- 5 Display text **[MENU]** changes according to the context
- 6 Battery charge
- 7 Display text **[NAMES]** - changes according to the context



3.6.1 Other Icons on the Start Screen

Apart from the icons permanently on the start screen, other icons appear at the top edge of the start screen according to the current settings.

The following overview provides a selection of the most frequently used symbols.

	The Bluetooth function is activated.
	The GENERAL user profile is switched on. The mobile phone rings and vibrates when calls or texts are received.
	The SILENT user profile switched on. The mobile phone is muted.
	The MEETING user profile is switched on. The mobile phone vibrates when calls or texts are received.
	The OUTDOOR user profile is switched on. The mobile phone rings and vibrates when calls or texts are received.
	A text which has not yet been read is in your inbox.
	The roaming service (use of a different mobile network, e.g. when abroad) is active.

 Please note that using roaming services can incur additional charges.

4. Using the Mobile Phone

This chapter explains how to navigate through the mobile phone menus, enter phone numbers and letters and how you can respond to incoming and outgoing calls.

4.1 Making Calls

Proceed as follows to make a call:



Enter the required phone number using the **digit keys** and then press the **Call key**.

4.2 Taking, Ending and Rejecting Calls

When you want to take, end or reject calls, use the following keys:



Press the **Call key** to take an incoming call.



Press the **On-hook key** to end a call in progress.



You can press the **On-hook key** to reject an incoming call.

4.3 Navigating in the Menu

 To unlock the key lock function, press the **left-hand softkey** and **Star key**.


Use the following keys to navigate through the menus provided by the mobile phone.




Navigate up, down, to the right or left in the menu. The quick access functions which can be freely assigned are on the start screen.



Open a menu option or confirm your entries.

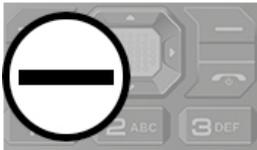

Open a menu option or confirm your entries.

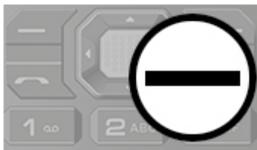

Discard the settings or navigate one menu level back.

4.4 Entering Phone Numbers and Letters

In order to enter phone numbers and letters or delete entries, use the **digit keys** or the **softkeys** on the mobile phone keypad.

4.4.1 Changing the Input Method

When the mobile phone is initially supplied, the multi-tap input method **De** (German) is set. You can change the input method (e.g. to UPPER CASE, lower case or digits 123) by opening the text mode and pressing the **Hash key** as often as necessary.

If you want to enter text, press the key containing the letter/character you want the corresponding number of times. The letters/characters assigned to a key are imprinted on the respective key.

Pressing the **4 key**, for example, enables you to enter the digit 4 as well as the letters G, H and I. If you want the first letter in the group, press the key once. If the second character is required, press it twice, and so on.

To enter two characters assigned to the same key, press the key the respective number of times to enter the first character. Wait until the cursor skips to the next position and then enter the respective letter.



You can change and save your preferred input method in the **SETTINGS** → **PHONE SETTINGS** → **PREF. INPUT METHOD** menu.

4.4.2 Punctuation and Special Characters

Press the **Star key** while writing a message or other text.

All the punctuation marks and special characters available are displayed. Select the character you want with the **Navigation keys** and confirm it with the **left-hand softkey**.



Repeatedly pressing the **1 key** in Edit mode scrolls through a list of frequently used punctuation and special characters.

4.4.3 Other Entries and Functions

Press the **0 key** to enter a space.

Press the **right-hand softkey** to delete characters.

Press and hold the **right-hand softkey** for 2 seconds to delete all the characters.

4.5 Quick Access

You can use some keys on your phone as quick access keys. A quick access is performed directly on the start screen.

4.5.1 Messages



Open the **MESSAGING** menu.

Further information is provided in Section **5.9 Messages on page 59**.

4.5.2 Audio Player



Open the **AUDIO PLAYER** menu.

Further information is provided in Section **5.10.6 Audio Player on page 71**.

4.5.3 User Profiles



Open the **USER PROFILES** menu.

Further information is provided in Section **5.6 User Profiles on page 46**.

4.5.4 Camera



Open the **CAMERA** menu.

Further information is provided in Section **5.10.1 Camera on page 67**.

5. Mobile Phone Menu

The main mobile phone menu is divided into topically organised groups (submenus).

The following descriptions always assume that the starting point for the operation is the mobile phone's start screen.

The higher level menus, such as the Phone Book, Messages and Settings menus, are located on the start screen of the mobile phone.

5.1 Display Texts

In this operating manual, all important functions are explained with the help of texts, illustrations and examples.

You will find display texts illustrated in many sections of this operating manual. These display texts correspond to the texts which appear on the screen of your mobile phone.

Framed texts are provided in the following operating steps. These frames indicate texts which can appear in the display of the mobile phone.

If several display texts are shown in succession, navigate with the **navigation keys** and the **softkeys** to the display texts shown.

5.2 Basic Settings of the Mobile Phone

5.2.1 Setting the Language

Set one of the four menu languages available on your mobile phone.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **SETTINGS** → **PHONE SETTINGS** → **LANGUAGE**.
- 3 Select the required setting.
- 4 Confirm with **OK**. Your mobile phone menu will be shown in the selected language.

5.2.2 Setting the Time and Date

Set the time and date before using the mobile phone for the first time.

- 1 Press the **left-hand softkey** to open the **MENU**.
 - 2 Navigate to **SETTINGS** → **PHONE SETTINGS** → **TIME AND DATE** → **SET TIME/DATE**.
 - 3 Enter the current time and date using the **digit keys**.
-  Set the time zone and time/date format according to your needs.
- 4 Confirm with **SAVE**. The setting is saved.

5.3 Menu Options Available During a Call

While a call is in progress, it is possible to change the volume, activate the handsfree function, mute the microphone and activate a conference with other call participants.

5.3.1 Adapting the Volume During a Call



Change the volume during a call using the **Navigation keys, up and down.**

5.3.2 Handsfree Function

You can select whether to hear the caller via the loudspeaker.

- 1 Select **H-FREE** while a call is in progress. The caller can then be heard via the loudspeaker.
- 2 Select **H-HELD** to switch off the loudspeaker.

5.3.3 Muting the Microphone

You can switch the microphone off while the call is in progress. Muting the phone means that the call continues to be connected, you can still hear the caller but the caller can no longer hear you.

- 1 During a call, select **OPTIONS** → **SILENT**. The microphone is muted, the caller can no longer hear you.
- 2 Select **OPTIONS** → **UNMUTE**. The muting function is deactivated and the caller is able to hear you again.

5.3.4 Putting a Call on Hold

You can select whether to put the call in progress on hold. Putting a call on hold means putting it into holding mode. The call is put into a waiting loop while you set up a call with another person. The first caller cannot hear this call.

- 1 During a call, select **OPTIONS** → **HOLD**. The caller is put on hold.
- 2 Navigate to **OPTIONS** → **RETRIEVE** to resume the call previously put on hold.

5.3.5 Conference Facility

You can set up a conference call, meaning communicating with at least two other parties at the same time.

1 When a call is in progress, select **OPTIONS** → **PHONEBOOK** and select the number of a third participant.

2 Press the **Call key**.

3 The number of the contact selected is dialled.



During this time, the call with the first caller is held until the second caller has taken the call and you start the conference.

4 Wait until the second caller has taken the call and select **OPTIONS** → **CONFERENCE**. The conference call facility is activated and you can talk to both parties (or more).

5 Press the **On-hook key** to end the conference. Alternatively, select **OPTIONS** → **END CONF. CALL** if you want to end the conference with one of the callers.

5.4 Settings

The **SETTINGS** menu is used to adapt the basic settings of the mobile phone, such as time, language, call settings, phone settings, network and security settings, to your own needs.

5.4.1 Phone Settings

Set the various settings, e.g. for time, language, quick-dial keys, on the mobile phone.

5.4.1.1 Preferred Input Method

You can define the method by which you enter text. This setting affects all the operating modes in which text can be entered (creating phone book contacts, writing text messages, etc.).

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **SETTINGS** → **PHONE SETTINGS** → **PREF. INPUT METHOD**.
- 3 Select the required setting.
- 4 Confirm with **OK**. The setting is saved and affects all the relevant menus.

5.4.1.2 Setting the Back-Lighting

You can define how bright the back-lighting of the screen display should be and how long it should be active.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **SETTINGS** → **PHONE SETTINGS** → **DISPLAY** → **LCD BACKLIGHT**.
- 3 Select the required settings. Change the settings using the **navigation keys**.
- 4 Confirm with **OK**. The setting is saved.

5.4.1.3 Setting the Background Image

You can select a picture which should appear on the start screen.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **SETTINGS** → **PHONE SETTINGS** → **DISPLAY** → **WALLPAPER**.
- 3 Navigate to the storage location of the wallpaper (background image).
- 4 Confirm with **OK**. The setting is saved. The wallpaper selected appears permanently on the start screen.

If you have installed a microSD memory card in your mobile phone and you have stored a suitable image on it, you can use this image as your wallpaper.

5.4.2 Call Settings

You can define various settings in order to specify certain telephone reactions and features for your mobile phone.

5.4.2.1 Call Waiting

Define whether a new, incoming call should be indicated by means of the call waiting signal while a call is already in progress.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **SETTINGS** → **CALL SETTINGS** → **SIM 1 CALL SETTINGS** → **CALL WAITING**.
- 3 Select Activate or Deactivate.
- 4 Confirm with **OK**. The setting is saved.

You can check whether the service is available in **QUERY STATUS**. Contact your mobile phone provider if you want to enable the service. Please note that the range of functions available can vary according to the mobile phone provider.

5.4.2.2 Call Divert

Define whether and in what situations incoming calls to the mobile phone should be diverted to another, specified phone number.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **SETTINGS** → **CALL SETTINGS** → **SIM 1 CALL SETTINGS** → **CALL DIVERT**.
- 3 Select the required call divert setting.
- 4 Select **ENABLE** → **TO NEW NUMBER** and enter the phone number to which the calls should be diverted.

Alternatively, select **ENABLE** → **TO NEW NUMBER** → **OPTIONS** → **FROM PHONEBOOK** and select a contact from your phone book.

- 5 Confirm with **OPTIONS** → **DONE**. The setting is saved.

If necessary, deactivate all the call diversions you have set up.

- 1 Navigate to **SETTINGS** → **CALL SETTINGS** → **SIM 1 CALL SETTINGS** → **CALL DIVERT** → **CANCEL ALL DIVERTS**.

5.4.3 Call Number Blacklist

You can set up a call number blacklist containing up to 20 phone numbers. If you set this function, the phone numbers saved in the blacklist can no longer call you. In this case, the caller automatically receives a busy signal.

This function is useful, for example, if you want to prevent unwanted calls (such as sales calls or opinion polls).

5.4.3.1 Switching the Call Number Blacklist On/Off

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **SETTINGS** → **CALL SETTINGS** → **ADVANCED SETTINGS** → **BLACK LIST** → **BLACKLIST NUMBERS**.
- 3 Select **ON** / **OFF**.
- 4 Confirm with **OK**. The phone numbers in the call number blacklist can no longer call you.

5.4.3.2 Adding Phone Numbers to the Blacklist

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **SETTINGS** → **CALL SETTINGS** → **ADVANCED SETTINGS** → **BLACK LIST** → **BLACKLIST NUMBERS**.
- 3 Select a memory location which is empty.
- 4 Enter a phone number you want to add to the blacklist.
- 5 Confirm with **OPTIONS** → **DONE**. The setting is saved.

5.4.4 Answer Mode

You can define how you take incoming calls.

- 1 Press the **left-hand softkey** to open the main menu.
Navigate to **SETTINGS** → **CALL SETTINGS** → **ADVANCED SETTINGS** → **ANSWER MODE**.
- 2 Select the required setting.
- 3 Confirm with **DONE**. The setting is saved.

5.4.5 Security Settings

Define an individual PIN (**P**ersonal **I**dentification **N**umber) to secure the SIM card and a phone lock password to secure the mobile phone.



If you change your PIN or phone lock password, we urgently recommend that you make a note of the new PIN or password and keep it in a safe place.

5.4.5.1 Switching the PIN Request On/Off

You can deactivate the request for your PIN from the SIM card if so required. This entails the risk that if you lose your mobile phone, your data can be misused by a third party, and costs may be charged to you.

- 1 Press the **left-hand softkey** to open the **[MENU]**.
- 2 Navigate to **[SETTINGS]** → **[SECURITY SETTINGS]** → **[SIM 1 SECURITY]** → **[PIN LOCK]**.
- 3 Enter the PIN. You can find the standard PIN in your SIM card documents.
- 4 Confirm with **[OK]**. The setting is saved. The PIN request is switched on or off.

5.4.5.2 Changing the PIN

Change the pre-set PIN to a combination of numbers you can remember easily.



We recommend that you choose your PIN so that it is not possible for unauthorised persons to determine the number combination simply by trial and error with easy combinations (such as 1-2-3-4 or 0-0-0-0).

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **SETTINGS** → **SECURITY SETTINGS** → **SIM 1 SECURITY** → **CHANGE PIN**.
- 3 Enter your PIN.



You can find the standard PIN in your SIM card documents.

- 4 Enter your new PIN.
- 5 Enter your new PIN again.
- 6 Confirm with **OK**. The setting is saved.

The PIN is saved on your SIM card. If you pass your SIM card on to a third party or use another mobile phone yourself, the PIN last set remains valid.

If you forget your PIN, you can reset your SIM card to its factory settings using the PUK. More detailed information on this is available

from your mobile phone provider.

5.4.5.3 Switching the Phone Lock On/Off

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **SETTINGS** → **SECURITY SETTINGS** → **PHONE SECURITY** → **PHONE LOCK**.
- 3 Enter the phone lock password.
- 4 Confirm with **OK**. The setting is saved.

In its default setting, the phone lock password is **0000**.



The phone lock is also active if no SIM card is installed in the mobile phone.

5.4.5.4 Changing the Phone Lock Password

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **SETTINGS** → **SECURITY SETTINGS** → **PHONE SECURITY** → **CHANGE PASSWORD**.
- 3 Enter the phone lock password.
- 4 Enter the new phone lock password.
- 5 Enter the new phone lock password again.

6 Confirm with **[OK]**. The setting is saved.

5.4.5.5 Setting Up the Automatic Key Lock

You can define that the mobile phone key lock is automatically activated after a specific period of time. This helps prevent access to your mobile phone by authorised persons and minimises the risk of activating functions inadvertently.

- 1 Press the **left-hand softkey** to open the **[MENU]**.
- 2 Navigate to **[SETTINGS]** → **[SECURITY SETTINGS]** → **[SCREEN AUTO LOCK]**.
- 3 Select the required time period.
- 4 Confirm with **[OK]**. The mobile phone switches the automatic key lock on after the set period of time has elapsed.

If you want to switch the **[SCREEN AUTO LOCK]** function off, select the **[OFF]** option instead of a period of time.

Calls can be received and taken on the phone as normal even when the key lock is activated. Incoming calls and text messages are indicated by the respective ringing tone set and calls can be taken by pressing the **Call key**.

5.4.5.6 Key Lock

The key lock function is intended to prevent other functions being activated inadvertently.

5.4.5.7 Using the Key Lock

You can only activate the key lock when the start screen is on the mobile phone display.

- 1 Press the **left-hand softkey** and **Star key** to unlock or lock the keys on the mobile phone.

5.5 Network Settings

The mobile phone searches for and automatically selects the mobile network assigned to the SIM card or mobile phone provider (network operator).

The presettings in this menu are set up by the SIM card or network operator.



We recommend that you do not alter the settings in this menu.

5.6 User Profiles

A user profile brings together diverse settings such as ring tone, ring volume, vibration alert, switching on/off tones and other acoustic signals in a personalised menu.

You have the option of choosing a preinstalled user profile and/or adapting it to suit your own needs.

We recommend that you use the **GENERAL** user profile if you want to complete personal adjustments.

5.6.1 Activating the User Profile

Switch on any user profile. All settings that define the user profile (such as ring tones, volume etc.) are active.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **SETTINGS** → **USER PROFILES**.
- 3 Select the user profile required.
- 4 Confirm with **OPTIONS** → **ENABLE**. The user profile selected is activated.



Alternatively, press the **right-hand navigation key** and switch between the user profiles.

5.6.2 Adapting the User Profile

Adapt your user profile according to your needs. You can customise all user profiles.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **SETTINGS** → **USER PROFILES**.
- 3 Select the user profile required.
- 4 Select **OPTIONS** → **CUSTOMIZE**.

5.6.2.1 Setting the Type of Alert Signal

You can define what type of alert signal you require from the mobile phone in the event of incoming calls and text messages.

- 1 Navigate to **ALERT TYPE**.
- 2 Select **OPTIONS** → **CHANGE**.
- 3 Select the required setting.
- 4 Confirm with **OK**.

5.6.2.2 Setting the Ring Tones

You can select your favourites from the different ring tones available.

- 1 Navigate to **RINGTONE**.
- 2 Select **OPTIONS** → **CHANGE**.
- 3 Select the required setting.
- 4 Confirm with **OK**.

5.6.2.3 Setting the Ringing Tone Volume

Adapt the volume of the incoming calls.

- 1 Navigate to **RINGTONE VOLUME**.
- 2 Select **OPTIONS** → **CHANGE**.
- 3 Select the required setting.
- 4 Confirm with **OK**.

5.6.2.4 Other Settings

Use this menu to adapt the settings of other tones (such as **MESSAGING** or **KEYPAD**).

5.6.3 Adapting Dual SIM Settings

You can adapt the Dual SIM settings according to your own needs. You can adapt which SIM card should be used or switch the phone to flight mode.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **SETTINGS** → **DUAL SIM SETTING**.
- 3 Select the required dual SIM setting.
- 4 Confirm with **OK**.

5.6.4 Restoring the Default Factory Settings

Restore the default factory settings of your mobile phone before handing it over to a third party, e.g. for repair or sale.

First, save your personal data (e.g. phone book contacts, photos or text messages) to your SIM card or a microSD memory card.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **SETTINGS** → **RESTORE SETTINGS**.
- 3 Enter the phone lock password.

In its default setting, the phone lock password is **0000**.

- 4 Confirm with **OK**. The default factory settings of your mobile phone are restored.

5.7 Phone Book

The phone book in the phone can store up to 500 contacts. You can store more contacts on the SIM card.

If the mobile phone or SIM card memory is full, a corresponding message appears in the display. In order to add new entries, you must first delete old entries or select a different storage location.

The contacts are arranged in alphabetical order.

5.7.1 Adding a contact

Save your contacts in the phone book in order to be able to access important phone numbers quickly.

- 1 Press the **left-hand softkey** to open the **[MENU]**.
- 2 Navigate to **[PHONEBOOK]** → **[ADD NEW CONTACT]**.
- 3 Select a storage location (**[TO SIM]** or **[TO PHONE]**) for the new contact.
- 4 Enter the name and phone number.
- 5 Confirm with **[OPTIONS]** → **[SAVE]**. The new contact is saved.

5.7.1.1 Calling a Contact

You can call contacts stored in the phone book as follows.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **PHONEBOOK**.
- 3 Select a contact.

Enter the first letters of the stored name using the keypad to jump to a specific entry. It may be necessary to press a key several times. Further information is provided in **Section 4.4 Entering Phone Numbers and Letters on page 27**.

- 4 Press the **Call key**. The phone number is dialed.

5.7.1.2 Deleting a Contact

You can delete contacts from the phone book.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **PHONEBOOK**.
- 3 Select the required contact.
- 4 Select **OPTIONS** → **DELETE** and confirm the prompt. The contact is deleted.

5.7.1.3 Editing a Contact

Edit contacts in the phone book.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **PHONEBOOK**.
- 3 Select the required contact.
- 4 Select **OPTIONS** → **EDIT**.
- 5 Edit the contact details.
- 6 Confirm with **OPTIONS** → **SAVE**. The modifications are saved.

5.7.2 Phone Book Settings

You can set more settings in the phone book. You can define, for example, where new phone book contacts should be stored.

5.7.2.1 Memory Status

This provides information regarding the number of contacts stored and storage locations available:

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **PHONEBOOK** → **OPTIONS** → **PHONEBOOK SETTINGS** → **MEMORY STATUS**. The storage locations still available are displayed.

5.7.3 Fixed Dialling Numbers with Blacklist

You can define a list of phone numbers which can be dialled using your mobile phone. Telephoning with your mobile phone is then restricted to these phone numbers. Exceptions to this are official emergency call numbers such as 112 - these can be called despite the restrictions.

5.7.3.1 Activating the Fixed Dialling Number Function

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **PHONEBOOK** → **OPTIONS** → **PHONEBOOK SETTINGS** → **EXTRA NUMBERS** → **FIXED DIAL** → **SIM** → **MODE**.
- 3 Select **ON**.
- 4 Enter the PIN for your SIM card.
- 5 Select **OK** to confirm.

5.7.3.2 Adding a Phone Number to the Blacklist

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **PHONEBOOK** → **OPTIONS** → **PHONEBOOK SETTINGS** → **EXTRA NUMBERS** → **FIXED DIAL** → **SIM** → **BLACK LIST**.
- 3 Select **OPTIONS** → **ADD** and enter a name and phone number.
- 4 Select **OPTIONS** → **SAVE** to confirm.

5.7.4 Fixed Dialling Number with Blacklist

You can define a list of phone numbers which cannot be dialled using your mobile phone. It is then not possible to dial these phone numbers using your mobile phone.

5.7.4.1 Adding a phone number to the blacklist

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **PHONEBOOK**.
- 3 Select the contact to be excluded in your phone book.
- 4 Navigate to **OPTIONS** → **ADD TO BLACK LIST**.
- 5 Select **YES** to confirm the entries.

 Alternatively, you can simply add a phone number to the blacklist.

- 1 Navigate to **SETTINGS** → **CALL SETTINGS** → **ADVANCED SETTINGS** → **BLACK LIST** → **BLACKLIST NUMBERS**.
- 2 Select a free list space and enter the phone number.
- 3 Select **OPTIONS** → **DONE** to confirm the input.

5.7.4.2 Deleting Numbers from the Blacklist

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **SETTINGS** → **CALL SETTINGS** → **ADVANCED SETTINGS** → **BLACK LIST** → **BLACKLIST NUMBERS**.
- 3 Select the required contact.
- 4 Select **EDIT** and delete the phone number.
- 5 Select **OPTIONS** → **DONE** to confirm the input.

5.8 Call History

The Call History menu displays the numbers last dialled as well as calls received or missed in different lists.

If a number in one of the call lists matches an entry in your phone book, the corresponding name is displayed.

5.8.1 Options for the Call lists

The following descriptions of the call history options apply to calls missed, calls made and calls received. Navigation and use is the same in all the submenus.

5.8.1.1 Views

This option provides more detailed information (e.g. time and date of the call and number of calls) regarding the entry selected.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **CALL HISTORY**.
- 3 Select the required call list.
- 4 Select the required entry.
- 5 Select **OPTIONS** → **VIEW**. An overview of more detailed information on the selected entry is displayed.

5.8.1.2 Making a Call

You can call an entry from the call lists.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **CALL HISTORY**.
- 3 Select the required call list.
- 4 Select the required entry.
- 5 Press the **Call key**. The entry selected is dialled.

5.8.1.3 Writing a Text Message

You can write and send a text message to the selected entry.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **CALL HISTORY**.
- 3 Select the required call list.
- 4 Select the required entry.
- 5 Select **OPTIONS** → **SEND TEXT MESSAGE**.
- 6 Enter your text.
- 7 Select **OPTIONS** → **SEND TO**.
- 8 Select the required contact.
- 9 Select **OPTIONS** → **SEND**. The text message is sent.

5.8.1.4 Saving in the Phone Book

You can transfer entries stored in the call list to your phone book.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **CALL HISTORY**.
- 3 Select the required call list.
- 4 Select the required entry.
- 5 Select **OPTIONS** → **SAVE TO PHONEBOOK**.
- 6 Select a storage location for the phone book contact.

- 7 Enter a name for the phone book contact.
- 8 Confirm with **OPTIONS** → **SAVE**. The setting is saved.

5.8.1.5 Deleting Entries

You can delete an entry from the call history lists.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **CALL HISTORY**.
- 3 Select the required call list.
- 4 Select the required entry.
- 5 Select **OPTIONS** → **DELETE** and confirm the prompt. The contact is deleted.

Alternatively, you can delete all the call lists in one operation. Navigate to **CALL HISTORY** → **DELETE CALL LOGS** → **ALL CALLS**. Confirm the prompt. All the entries in the call logs are deleted.

5.9 Messages

The **MESSAGING** menu can be used to write text messages (also called "SMS"), view, answer, forward and delete received and sent text messages, write draft messages and make further settings.

The following information relates to the **INBOX**, **DRAFTS**, **OUTBOX** and **SENT MESSAGES** submenus. Navigation and use is the same in all the submenus.



A standard text message contains 160 characters.

Sending a text message with more than 160 characters could result in additional costs, depending on the terms of your SIM card.

It is possible that not all functions described are supported by every mobile service provider. Therefore, please contact your local mobile service provider for details.

5.9.1 Writing a Text Message

Write a text message.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **MESSAGING** → **WRITE MESSAGE**.
- 3 Enter your text.
- 4 Select **OPTIONS** → **SEND TO**.
- 5 Select **ADD FROM PHONEBOOK** and then the required phone book contact.



Alternatively, you can enter the phone number manually.

- 1 Select **MESSAGING** → **WRITE MESSAGE** → **OPTIONS** → **SEND TO** → **ENTER NUMBER** and enter the phone number manually.
- 2 Select **OPTIONS** → **SEND**. The text message is sent.

5.9.2 Viewing a Text Message

Open any text message in order to view the full content of the message.

- 1 Press the **left-hand softkey** to open the **[MENU]**.
- 2 Navigate to the text message → **[INBOX]**.
- 3 Select the required text message.
- 4 Select **[VIEW]**. The text message is opened.

5.9.3 Replying to a Text Message

Send a reply to the sender of a received text message.

- 1 Press the **left-hand softkey** to open the **[MENU]**.
- 2 Navigate to **[MESSAGING]** → **[INBOX]**.
- 3 Select the required text message.
- 4 Select **[OPTIONS]** → **[REPLY]**.
- 5 Enter your text.
- 6 Select **[OPTIONS]** → **[SEND TO]**.
- 7 Select the sender of the text message received.
- 8 Select **[OPTIONS]** → **[SEND]**. The text message is sent.

5.9.4 Calling the Sender of a Text Message

Call the sender of a text message received.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **MESSAGING** → **INBOX**.
- 3 Select the required text message.
- 4 Select **OPTIONS** → **CALL SENDER**. The sender of the message received is called.

5.9.5 Forwarding a Text Message

Forward a text message.

- 1 Press the **left-hand softkey** to open the main menu.
- 2 Navigate to **MESSAGING** → **INBOX**.
- 3 Select the required text message.
- 4 Select **OPTIONS** → **FORWARD**.
- 5 If necessary, edit the selected text message.
- 6 Select **OPTIONS** → **SEND TO**.
- 7 Select **ADD FROM PHONEBOOK** and then the required phone book contact.



Alternatively, you can enter the phone number manually.

- 1 Select **MESSAGING** → **INBOX** → **OPTIONS** → **FORWARD** → **OPTIONS** → **SEND TO** → **OPTIONS** → **ENTER NUMBER** and enter the phone number manually.
- 2 Select **OPTIONS** → **SEND**. The text message is sent.

5.9.6 Deleting a Text Message

Delete a text message.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **MESSAGING** → and select, e.g., **INBOX**.
- 3 Select the required text message.
- 4 Select **OPTIONS** → **DELETE** and confirm the prompt. The text message is deleted.

5.9.7 Saving Phone Numbers in the Phone Book

You can save a phone number, from which you have received a text message, in your phone book.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **MESSAGING** → **INBOX**.
- 3 Select the required text message.
- 4 Select **OPTIONS** → **SAVE TO PHONEBOOK**.

- 5 Select the storage location.
- 6 Enter a name.
- 7 Select **OPTIONS** → **SAVE** to confirm. The phone number from which a text message was received is stored as a phone book contact.

5.9.8 Saving a Text Message as a Draft

Write a text which you want to save as a draft.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **MESSAGING** → **WRITE MESSAGE**.
- 3 Enter your text.
- 4 Confirm with **OPTIONS** → **SAVE**. The text message is saved as a draft.

5.9.9 Settings for Text Messages

You can make further settings, such as the preferred storage location of your text messages or saving delivery reports for sent messages.

5.9.9.1 Preferred storage

This defines whether the text messages are stored on the mobile phone or SIM card.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **MESSAGING** → **SMS SETTINGS** → **PREFERRED STORAGE**.
- 3 Select the preferred storage location for your text messages.
- 4 Confirm with **SAVE**.

5.9.9.2 Delivery reports

You can define whether you want to receive a delivery (transmission) report for text messages sent.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **MESSAGING** → **SMS SETTINGS** → **SIM** → **DELIVERY REPORT**.
- 3 Select the setting you want for the sent text messages.
- 4 Confirm with **SAVE**.

When the default setting is set, the text messages sent are saved.

5.9.9.3 Memory Status

You can check how much memory space is available for your text messages.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **MESSAGING** → **SMS SETTINGS** → **MEMORY STATUS**. The memory capacity of the SIM cards and mobile phone is displayed.

5.10 Multimedia

Your mobile phone can display and play various forms of multimedia content (photos, music and videos). There are various applications available for this. Your mobile supports file formats .jpeg and .bmp to display photos, .mp3, .midi and .wav to playback music files and .avi and .mp4 to playback video files.



Insert a microSD memory card into your mobile phone before you use the multimedia options. Pay attention to the information in **Section 3.2 Inserting a MicroSD Memory Card on page 19**.

5.10.1 Camera

The camera can be used to take photos.

Observe local regulations and respect other peoples' rights of privacy.

- 1 Press the **left-hand softkey** to open the **[MENU]**.
- 2 Navigate to **[MULTIMEDIA]** → **[CAMERA]**.
- 3 The subject in front of the camera lens appears on the mobile phone screen.
- 4 Press the **Confirm key**. The camera integrated in the mobile phone stores the subject as a photo.

5.10.1.1 Camera Settings

Define the settings for shutter time, exposure value, contrast, self-timer and serial exposure.

You can adjust the quality of the photos taken and define a variety of different settings.

Some settings assume an in-depth knowledge of photography. Test the most convenient way of presenting photos for yourself.

- 1 Press the **left-hand softkey** to open the **[MENU]**.
- 2 Navigate to **[MULTIMEDIA]** → **[CAMERA]**.
- 3 Select **[OPTIONS]** → **[CAMERA SETTINGS]**.
- 4 Adjust and define the settings as required.
- 5 Confirm with **[SAVE]**.

5.10.1.2 Image Settings

Define the settings for image size and image quality.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **MULTIMEDIA** → **CAMERA**.
- 3 Select **OPTIONS** → **IMAGE SETTINGS**.
- 4 Adjust and define the settings as required.
- 5 Confirm with **SAVE**.

5.10.1.3 Storage Location

The photos you take are automatically saved on the installed microSD memory card.



The photos stored on the microSD memory card can be used as wallpaper images, for example. Please observe to the information in Section **5.4.1.3 Setting the Background Image on page 36**.

5.10.2 Image Viewer

You can use the image viewer to view and organise your photos.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **MULTIMEDIA** → **IMAGE VIEWER**.

Use **OPTIONS** → **IMAGE INFORMATION** to display more information on the photos. The photos can also be used as wallpaper, sent via Bluetooth, renamed, deleted or used as an image when switching the mobile phone on and off.



Pay attention to the information in Section **5.13 Bluetooth on page 75**.

5.10.3 Video Recorder

The camera can be used to record videos.

Observe local regulations and respect other peoples' rights of privacy.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **MULTIMEDIA** → **VIDEO RECORDER**.

The subject in front of the camera lens appears on the mobile phone screen.

- 3 Press the **Confirm key**. The camera installed in the mobile phone starts to record a video.

You can adjust the quality of the video being recorded and define a variety of different settings.

Some settings require an advanced knowledge of recording videos. Test the most convenient way of presenting videos for yourself.

5.10.3.1 Setting the Frame Rate

Define the settings for the frame rate.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **MULTIMEDIA** → **VIDEO RECORDER**.
- 3 Select **OPTIONS** → **CAMCORDER SETTINGS**.

- 4 Adjust and define the settings as required.
- 5 Confirm with **SAVE**.

5.10.3.2 Video Settings

Complete the setting adjustments regarding video quality.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **MULTIMEDIA** → **VIDEO RECORDER**.
- 3 Select **OPTIONS** → **VIDEO SETTINGS**.
- 4 Adjust and define the settings as required.
- 5 Confirm with **SAVE**.

5.10.3.3 Storage Location

The videos you record are automatically saved on the installed microSD memory card.

5.10.4 Video Player

You can use the video player to view and organise your videos.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **MULTIMEDIA** → **VIDEO PLAYER**.

Use **OPTIONS** to display more information on the videos.

5.10.5 Sound Recorder

The sound recorder function enables the mobile phone to be used as a dictation machine to make your own sound recordings.

5.10.5.1 Creating a sound recording

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **MULTIMEDIA** → **SOUND RECORDER**.
- 3 Select **RECORD**. Sounds recording is started.

Use the **PAUSE** and **STOP** options to interrupt or stop the sound recording.

5.10.5.2 Storage Location

The sound recordings you record are automatically saved on the installed microSD memory card.

5.10.6 Audio Player

The Audio Player function is used to playback audio files.

5.10.6.1 Managing Audio Files

Sound recordings and audio files produced can be played back, renamed, deleted or transferred via bluetooth.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigieren Sie zu **MULTIMEDIA** → **AUDIO PLAYER** → **LIST** → **OPTIONS**.
- 3 Select the required function.

5.10.7 FM Radio

The mobile phone is equipped with an integrated radio with which you can receive radio stations in the FM frequency range.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **MULTIMEDIA** → **FM RADIO**.
- 3 Use the **Navigation keys** to tune the FM radio.

5.10.7.1 Searching for Radio Stations Manually

Enter the transmission frequency manually to access a radio station directly.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **MULTIMEDIA** → **FM RADIO** → **OPTIONS** → **MANUAL INPUT**.
- 3 Enter the transmission frequency of the radio station.
- 4 Confirm with **OPTIONS** → **SAVE**. You will hear the manually entered radio station.

5.10.7.2 Saving Radio Stations in the Channel List

Save your radio stations in the channel list.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **MULTIMEDIA** → **FM RADIO** → **OPTIONS** → **CHANNEL LIST**.

- 3 Select a memory location which is empty.
- 4 Select **OPTIONS** → **EDIT**.
- 5 Enter the name of a channel and the transmission frequency of the channel.
- 6 Confirm with **SAVE**. The radio station is saved in the channel list.

5.10.7.3 Searching For / Storing Radio Stations Automatically

The mobile phone can search for all the locally available radio stations over the entire frequency band automatically and save those found in the channel list.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **MULTIMEDIA** → **FM RADIO** → **OPTIONS** → **AUTO SEARCH**.
- 3 Confirm with **YES**. All the locally available radio stations are saved in the channel list.
- 4 Change the channel names in the channel list, if necessary.

5.10.7.4 Volume Control

You can increase or reduce the volume of the radio station being played to various levels.

- 1 Press the **Star key** or **Hash key**. The volume is raised or lowered correspondingly.

A change in the volume level affects the volume being played

through the loudspeaker.



CAUTION! Exposure to the receiver earpiece at full volume for a long period could cause hearing damage. Do not hold the mobile phone directly on the ear when listening to the radio via the loudspeaker.

5.11 File Manager

The file manager can be used to manage the memory of your mobile phone and the memory of an installed microSD memory card.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **FILE MANAGER**.
- 3 You can manage the files according to your needs.

5.12 Torch

The Torch function uses the LED on the top end of the mobile phone as the torch.



CAUTION! Risk of injury to the retina. The LED for the torch is very bright and could cause damage to eyes. Never look directly into the LED torch beam when the torch is switched on.

5.12.1 Switching The Torch on/off

Switch the torch integrated in the phone on and off.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **TORCH**.
- 3 Select **ON** or **OFF**. The torch is switched on or off.



Alternatively, you can switch the torch LED on and off from the start screen by pressing the **0 key**.

- 1 Unlock the key lock of the mobile phone.
- 2 Press the **0 key** for 2 seconds. The torch is switched on or off.

5.13 Bluetooth

With the Bluetooth function, a standard for wireless data transfer, you can exchange data with other Bluetooth-capable devices free of charge.

5.13.1 Switching Bluetooth On/Off

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **BLUETOOTH**.
- 3 Select **POWER**. The Bluetooth function is switched on or off, accordingly.

5.13.1.1 Visibility

You can define whether your mobile phone should be visible for other Bluetooth-capable devices in the environment.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **BLUETOOTH**.
- 3 Select **VISIBILITY**. The mobile phone is visible or not visible for other Bluetooth-capable devices.

5.13.1.2 Connecting Devices via Bluetooth

Search for other Bluetooth-capable devices in your environment with which you want to connect your mobile phone.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **BLUETOOTH** → **MY DEVICE** → **SEARCH NEW DEVICE**.
- 3 Follow the instructions on the screen. Your mobile phone is connected to the device selected.

5.13.1.3 Changing the Device Name

You can give your mobile phone a name under which other Bluetooth-capable devices can find it.

1 Press the **left-hand softkey** to open the **MENU**.

2 Navigate to **BLUETOOTH** → **MY NAME**.



The name of the mobile phone is limited to 18 characters.

3 Enter a name for the mobile phone.

4 Confirm with **OPTIONS** → **DONE**. The setting is saved.

5.14 Tools

You can save important tasks in the Tools services provided on the mobile phone. You can enter tasks you want to be reminded of, use your mobile phone as an alarm clock, use the calendar or pocket calculator function or display the world time clock.

5.14.1 Calendar

The calendar provides an overview of the days, weeks and months of the year.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **TOOLS** → **CALENDAR**. An overview of the current month with the weekdays appears.
- 3 Use the **navigation keys** to navigate horizontally and vertically.

5.14.1.1 Jump to Date

You can skip directly to a date in the future or past as necessary. This may be useful, for example if you want to know on which weekday a birthday, wedding or other important events fall in the following year.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **TOOLS** → **CALENDAR** → **OPTIONS** → **JUMP TO DATE**.
- 3 Enter the required date using the **digit keys**.
- 4 Confirm with **OK**. The date entered is highlighted in the calendar overview on the screen.

5.14.1.2 Add Event

Select the date required and add the relevant event, e.g. a birthday or an important meeting, etc.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **TOOLS** → **CALENDAR** → **OPTIONS** → **ADD EVENT**.
- 3 You can then define further settings to adapt the event to your needs.
- 4 Confirm with **OPTIONS** → **SAVE**. The date entered is highlighted in the calendar overview on the screen.

5.14.2 Alarm clock

You can use the mobile phone as an alarm clock.

5.14.2.1 Switching the alarm clock on

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **TOOLS** → **ALARM**.

You can set up to 5 different alarm clocks.

- 3 Choose the required alarm and confirm it by selecting **EDIT**.
- 4 Select **POWER** → **ON**. The selected alarm clock is set.
- 5 Subsequently, you can make further settings to adapt the alarm clock to your requirements.
- 6 Confirm with **OPTIONS** → **SAVE**. The alarm clock is activated.

5.14.2.2 Setting the Time

Set the time at which the alarm should ring.

- 1 Enter the required time for the alarm using the **digit keys**.

5.14.2.3 Setting the Snooze Function

Set the period of time after which the alarm clock should ring again when you have temporarily switched off the alarm using the Snooze key.

- 1 Select .
- 2 Select the required entry.

5.14.2.4 Setting the Date

You can define whether and how often the alarm clock rings (once, daily or on certain days).

- 1 Select .
- 2 Select the required entry.
- 3 Confirm with .

Define other settings to the weekdays according to the selection or set the days on which the alarm should wake you.

5.14.2.5 Adjusting the Volume

You can adjust the volume of the alarm signal.

- 1 Select **VOLUME**.
- 2 Select the required volume.

5.14.2.6 Setting the Ring Tone

Set the ring tone you want to be woken by.

- 1 Select **ALARM TONE**.
- 2 You can select one of the different ringing tones available as the waking tone.
- 3 Confirm with **OK**. The selected ring tone is set.

5.14.3 Calculator

You can use the pocket calculator function by pressing the necessary **digit keys** and keys in the display to complete calculations.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **TOOLS** → **CALCULATOR**.
- 3 Enter the values for the calculation.

5.14.4 World Clock

The world clock function displays the time in other time zones or cities in the world.

- 1 Press the **left-hand softkey** to open the **MENU**.
- 2 Navigate to **TOOLS** → **WORLD CLOCK**.
- 3 Use the **navigation keys** to select a time zone or city. The corresponding time is displayed.

6. Other Important Information

6.1 Technical Data

Frequency band	GSM: 850 / 900 / 1800 / 1900 MHz, Bluetooth: 2.4 GHz
Transmission power	GSM: 850 / 900 / 1800 / 1900 MHz: max. 2 W Bluetooth (2.4 GHz): max. 100 mW
Power supply	Input: 100 - 240 V, 50 - 60 Hz, 0.3 A Output: 5 V, 500 mA
Rechargeable battery	3.7 V, 1700 mAh
Operation standby	Up to 240 hours
Max. talk time	Up to 8 hours
Display	2.4" LCD with back-lighting
Ports	MicroUSB
Dimensions	Approx. 133 × 57.5 × 15.8 mm
Weight	Approx. 121 g including battery
Permissible ambient conditions	-10 °C to 40 °C at 30 to 75% relative humidity
Features	Dual SIM
SD memory card (optional)	MicroSD memory card, max. 32 GB

Subject to change without notice!

6.2 Symbols

The following symbols are provided on the packaging. This section explains the individual significance of the symbols.



Waterproof and dustproof compliant with IP67



Shockproof due to the rubberised housing



Powerful battery for long periods of use



Multimedia functions provide entertainment

6.3 Care Instructions

Clean the housing surfaces regularly with a soft, slightly moist, lint-free cloth. Do not use any solvents or cleaning agents.

6.4 Disposal


In order to dispose of your device, take it to a collection point provided by your local public waste authorities (e.g. recycling centre). According to laws on the disposal of electronic and electrical devices, owners are obliged to dispose of old electronic and electrical devices in a separate waste container. You are legally obliged to dispose of batteries and power packs at a battery retailer or in the corresponding containers provided at collection points by local public waste authorities. Disposal is free of charge.



The symbol indicates that neither the device nor the battery may be disposed of in normal domestic waste! Risk to health and the environment through batteries! Never open,  damage or swallow batteries or allow them to pollute the environment. Batteries may contain toxic, ecologically hazardous heavy metals.



Packaging materials must be disposed of according to local regulations.

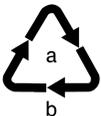

Observe the identifications on the packaging material when sorting the waste; these identifications relate to abbreviations (a) and numbers (b) which have the following significance: 1–7: plastics / 20–22: paper and cardboard / 80–98: composite materials.

6.5 Declaration of Conformity

CE GO Europe GmbH, Zum Kraftwerk 1, 45527 Hattingen, hereby declares that this device fulfils the basic requirements and other relevant provisions stipulated in the Directive 2014/53/EC.



The CE mark on the product confirms its conformity. The Declaration of Conformity for this product is available online at <http://productip.com/?f=10786d> or scan the adjacent QR code.

6.6 Manufacturer

GO Europe GmbH

Zum Kraftwerk 1

DE-45527 Hattingen

GERMANY

www.go-europe.com

6.7 Warranty

Dear Customer,

We are delighted that you have chosen this equipment.

In the case of a defect, please return the device together with the receipt and original packing material to the point of sale.

6.8 Frequently Asked Questions (FAQ)

In the event of a problem, use the information on the following pages first to try and identify it and implement the solutions proposed.

The mobile phone cannot be switched on.

There is no battery inserted or the battery is not sufficiently charged. Insert or charge the battery, whichever is necessary. Further information is provided in Section **3. Putting the Mobile Phone into Operation on page 17.**

When the battery charge drops below a minimum status, the mobile phone switches off automatically. Charge the battery in the mobile phone.

Neither the signal strength nor my mobile phone network are displayed on the start screen.

There is no network connection. Your mobile phone could be in a location without any network coverage. Move to a different location or contact your mobile phone provider (network operator).

Check that the SIM card is inserted correctly. Further information is provided in Section **3.1 Inserting SIM Cards on page 18.**

If you use the Dual SIM function offered by the mobile phone, the network availability and name of each mobile phone network used are displayed. Some mobile phone networks offer better coverage than others in different areas.

The digit keys does not function or only reacts very slowly to my input.

The operating speed of the display is reduced in the case of low temperatures, for example. Use the mobile phone within the ambient conditions specified in the Technical Data. Further information is provided in Section **6.1 Technical Data on page 83.**

Restart your mobile phone. Further information is provided in Section **3.5 Switching the Mobile Phone On and Off on page 22.**

In the case of some functions, a message appears indicating it cannot be executed.

Some services only function when you have enabled or activated the service. Please contact your mobile service provider for details.
The display of my mobile phone has "frozen" and the mobile phone does not react when keys are pressed.

Your mobile phone can occasionally crash. Remove the battery, wait 30 seconds, replace the battery in the phone and start it up again. Further information is provided in Section **3.5 Switching the Mobile Phone On and Off on page 22.**

The battery cannot be charged or is empty within a short time.

Charge the mobile phone for at least 2 hours. Please note that the battery only reaches its full capacity after several full charging processes.

If the problem continues, the battery may be defective and need to be changed. Please contact our service partners in such cases.

My mobile phone does not ring, either for incoming calls or incoming text messages.

Check the user profile which is currently active. Adapt the ringing behaviour in the active user profile of the mobile phone to your needs. Further information is provided in Section **5.4.1 Phone Settings on page 35**.

The caller is too quiet or difficult to understand.

Increase the volume of the caller using the navigation keys on the mobile phone. Further information is provided in Section **5.3.1 Adapting the Volume During a Call on page 32**.

The camera on my mobile phone works but I cannot save any pictures.

Expand the memory of the mobile phone by inserting a microSD memory card. You can purchase a microSD memory card from specialist retailers. Further information is provided in Section **5.10.1 Camera on page 67** and **3.2 Inserting a MicroSD Memory Card on page 19**.

I want to execute a function. A message in the mobile phone display requests that I enter the phone lock password.

In its default setting, the phone lock password is **0000**. Switch the prompt for the phone lock password on or off using the **SETTINGS** → **SECURITY SETTINGS** → **PHONE SECURITY** → **PHONE LOCK** menu option.



If the proposed solutions above do not lead to the mobile phone working as expected: Refer to the FAQs in the Internet under

www.go-europe.com or contact our Service department.

Subject to change without prior notice.

Art. No. 2283 / Version 2020.11

Operating Manual
ACTIVE mobile phone

GO Europe GmbH

Zum Kraftwerk 1

D-45527 Hattingen

Germany

www.go-europe.com

