

OLYMPIA 4210 Desk Telephone



4210

Operating Instructions

25.05.2011 gb/gb

Olympia Business Systems Vertriebs GmbH
Zum Kraftwerk 1
45527 Hattingen

1. Introduction	1	Ringling Melodies	8
Significance of the Symbols	1	Babycall	8
Important Safety Precautions	1	Display Contrast	8
Exemption From Liability	1	Date and Time	8
Intended Use	1	Long Distance Access Code	9
Information on Disposal	1	Area Code	9
2. Installation	2	Language of the Menu Guidance	9
Package Contents	2	6. Telephoning	10
Positioning and Connecting	2	Taking a Call	10
Important Information	3	Making a Call	10
3. Features	4	Redialling	10
4. Operating Elements and Indicators	5	Putting a Call on Hold	10
Equipment Description	5	Changing the Receiver Volume	10
Display	6	Changing the Ringing Volume	10
Other Icons/Texts in the Display	6	Changing the Loudspeaker Volume	11
5. Menu Structure	7	Compiling the Call Time	11
Overview	7	Muting the Microphone	11
Editing Phone Book Entries	8	Using the R Button	11
Creating Phone Book Entries	8	Entering a Dialling Pause (P)	11
Flash Time	8	Dialling Phone Numbers from the List of Incoming Calls	11

Contents

7. Speed Dial Memory and Phone Book	12
Saving Entries in the Phone Book	12
Editing Entries in the Phone Book	12
Storing Numbers of Incoming Calls in the Phone Book	12
Dialling Phone Numbers from the Phone Book	12
Deleting an Entry from the Phone Book	13
Programming One-touch Dialling Keys (M1 to M4)	13
Dialling with One-touch Dialling Keys (M1 to M4)	13
Programming the Speed-dial Keys (0 to 9)	13
Dialling with the Speed-dialling Keys	13
8. Call Identification (CLIP)	14
Call List	14
9. Miscellaneous	15
Alarm	15
Snooze	15
Voice Mail	15
Callback When Engaged	15
Filter	16
Filter Properties	16
Deleting Filter Entries	17

10. Operating in a PABX System	18
11. Disassembling	18
12. In Case of Problems	19
13. Cleaning and Servicing	19
14. Guarantee	20
15. Technical Modifications and Data	20
16. Index	21
17. Declaration of Conformity	23

Introduction

Significance of the Symbols



CAUTION: Indicates a potentially dangerous situation and, if ignored, could lead to minor injuries.



NOTE: Indicates a potentially dangerous situation and, if ignored, could lead to damage to property and the environment.

Important Safety Precautions

Please observe the following to ensure the telephone can be operated reliably:



CAUTION: Risk of electric shock!
Never open the equipment! Never use the equipment when it is wet or in the vicinity of a bathtub, shower or such facilities!



CAUTION: Risk of electric shock!
Repairs to defect equipment may only be carried out by authorised service centres.



CAUTION: Risk of suffocation!
Keep telephone and packaging materials out of reach of children.



NOTE: If the telephone is transferred to others, it is essential to enclose the instruction manual with it.

Exemption From Liability

We cannot guarantee that the information which relates to the technical properties of the product or to the product itself contained in this document is correct. The product and its accessories described in this document are subject to constant improvement and further development. For this reason, we reserve the right to modify components, accessories, technical specifications and related documentation of the product described herein at any time without notice.

Intended Use

The 4210 desk telephone has been designed for telephoning via a landline using a conventional analogue telephone network. A condition for intended use is that it is installed properly.

Any other use is considered unintended use. Unauthorised modification or reconstruction not described in this manual are not permitted.

Information on Disposal

The implementation of European law in national laws and directives obliges you to dispose of consumable goods appropriately. This serves to protect both persons and the environment.

The adjacent symbol indicates that electrical and electronic apparatus as well as batteries no longer required must be disposed of separate from domestic waste.

Old or unwanted devices must be disposed of at collection points provided by public waste authorities.

Batteries and power packs must be disposed of at shops which sell batteries or collection points which provide the corresponding containers.

Packaging materials must be disposed of according to local regulations.



2. Installation

Installation









Package Contents

Desk telephone	1
Receiver	1
Helix cable	1
Telephone connection cable	1
AAA batteries	3
Operating manual	1






Please check the contents of the package carefully. If anything is missing or shows signs of transport damage, do NOT put the telephone into service! In such a case, contact your sales outlet, with the purchase receipt to hand, or the OLYMPIA Service Centre directly.

 **NOTE:** Keep the equipment packaging so that it can be used to prevent equipment damage in the event of future transport.



Positioning and Connecting

-  **NOTE:** Position the desk telephone where it is easy to access.
-  **NOTE:** Ensure that it is set down on a stable, level, non-slip surface.
-  **NOTE:** In addition, ensure that the equipment is positioned where all the necessary cables can be laid in such a way that nobody can trip over them.
-  **NOTE:** Do not place the desk telephone in the direct vicinity of other electrical apparatus, such as microwave ovens, PCs or hi-fi equipment, for example.
-  **NOTE:** Do not expose the desk telephone to direct sunlight.
-  **NOTE:** Protect the desk telephone from getting wet.
-  **NOTE:** The desk telephone must not be set up in rooms in which condensation, corrosive vapours or high concentrations of dust develop and accumulate (e.g. cellar rooms, garages or winter gardens).
-  **NOTE:** The ambient temperature must be between 0 °C and 35°C.


Important Information

-  **NOTE:** Refer to Section *Equipment Description* for information on the location of the equipment elements mentioned below.
-  **NOTE:** Do not mix old and new batteries.
-  **NOTE:** Do not mix alkaline, standard (zinc-carbon) or rechargeable batteries.
-  **NOTE:** If the telephone will not be used for a longer period, remove the batteries to prevent damage caused by the batteries leaking. Pull out the phone plug from telephone line socket before opening the battery compartment.
-  **NOTE:** Ensure that the batteries are inserted the right way round (refer to the direction on the diagram in the battery compartment). Reversed polarity can cause damage to the telephone.

1. Open the battery compartment and insert 3 AAA batteries.

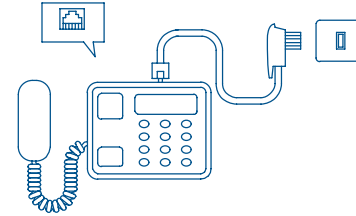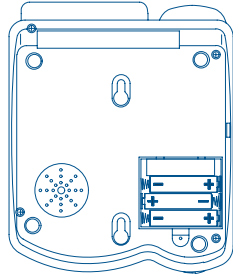

2. Insert the plugs in the relevant sockets provided on the desk telephone (they cannot be incorrectly connected because the sockets and plugs are designed to prevent reverse poling).
3. Plug the telephone line plug in the corresponding socket in the telephone connection socket.

 **NOTE:** The display lighting is only active when batteries are inserted/fully charged. If the display no longer functions, change the batteries.

 **NOTE:** Pull out the phone plug from telephone line socket before opening the battery compartment.

4. Set the volume control switch for the receiver to the required position. The switch is located on the side of the receiver.

3. Features

Features


We are pleased that you have purchased this high quality telephone which is equipped with the following features:

- Call identification, compatible with FSK/DTMF (automatic)
- Menu guidance in 9 languages
- 3-line display: 16-digit phone numbers, 16-character names
- Phone number memory for max. 44 incoming and 16 outgoing calls
- Phone book for 32 entries
- 2 one-touch dialling keys and 10 speed dialling keys
- Protection from unwanted calls
- 5-level display contrast setting
- Adjustable call volume
- Put calls on hold
- Redialling, handsfree, muting, flash, dialling pause
- Date, time, call time display
- Adjustable flash time
- Adjustable ringing tone volume
- New calls signalled by LED and in the display
- Display with back-lighting

4. Operating Elements and Indicators

Operating Elements and Indicators


Equipment Description

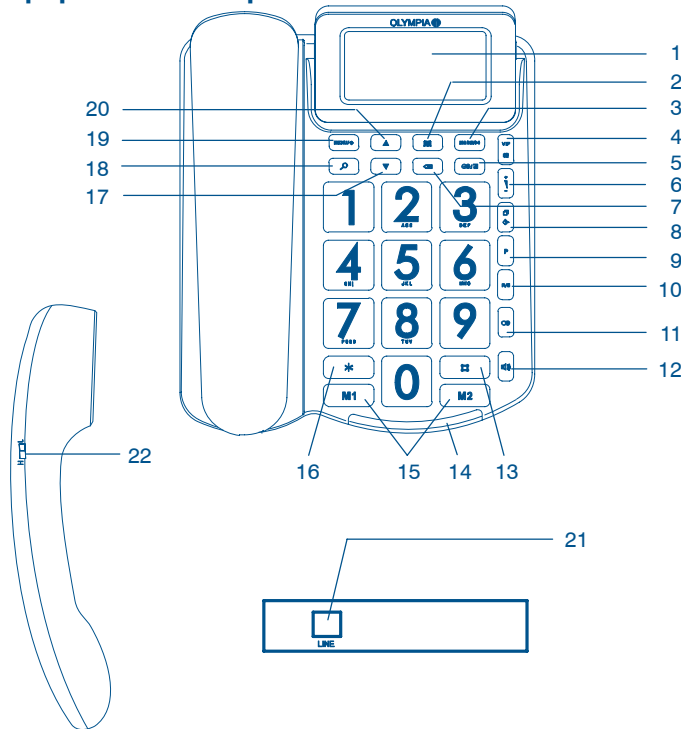

1		Display
2		Phone book button
3	MODE /	MODE / Alarm button
4	VIP /	VIP (filter) / Microphone muting button
5		Automatic redialling / Hold call button
6		Volume button
7		Delete button
8		Copy / Initiate speed dialling button
9	P	Dialling pause button
10	R/S	R (Flash) / Snooze button
11		Redialling button
12		Handsfree button
13		Hash button
14		LED, telephone is ringing
15	M1 – M2	One-touch dialling keys
16		Star button
17		Scroll down button
18		Call list, outgoing calls button
19	MENU /	MENU / OK button
20		Scroll up button
21	LINE	Telephone line socket
22		Receiver volume sliding switch

 4. Operating Elements and Indicators

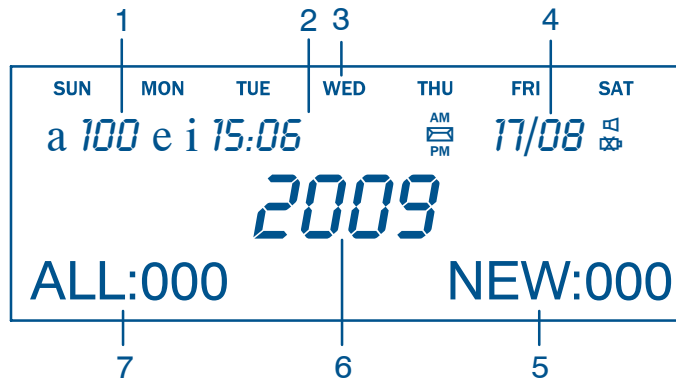


Display



- 1 Data record number
- 2 Time
- 3 Weekday *
- 4 Day / Month
- 5 Number of new calls in the memory
- 6 Year
- 7 Number of incoming calls in the memory

* SUN - Sunday, MON - Monday, TUE - Tuesday, WED - Wednesday,
THU - Thursday, FRI - Friday, SAT - Saturday

Other Icons/Texts in the Display

IN	Incoming calls
OUT	Outgoing calls
NEW	New calls
REP	Repeat call (redial)
FILTER	Filter is active
	New messages recorded
	Handsfree function has been switched on
	No batteries inserted / Batteries empty
VIP	Call from a number entered in the VIP list
AM	Ante Meridiem = before midday
PM	Post Meridiem = after midday

Menu Structure

Overview

Please follow the operating steps below in order to access the various menus:

1. Replace the receiver and press the **MENU**/ \diamond button.
2. Press the \blacktriangle or \blacktriangledown button to select the required menu.
3. Press the **MENU**/ \diamond button to open the required menu.
4. Press the \blacktriangle and \blacktriangledown buttons to select the required parameter.
5. Press the **MENU**/ \diamond button to save the corresponding setting and exit from the menu.
6. Press the \lt button to return to Standby mode.

Display	Function
Phonebook edit	Edit phone book entries
Phonebook input	Create phone book entries
Flash time	Set the Flash time (10 times available for selection)
Ring melody	Set the ringing melody (8 melodies available for selection)
Babycall	Switch babycall on/off / Enter the babycall number
Contrast adjust	Set the display contrast (5 levels)
Date/Time	Set the date, time
Long dist access	Set the long distance access code (max. 6 digits)
Set area code	Set the area code (max. 6 digits)
Select language	Select the language for the menu guidance (9 languages available for selection)

Tip: If no input is made for approx. 15 seconds, the menu is automatically closed.

5. Menu Structure

Tip: Press the  button to exit from a menu.

Editing Phone Book Entries

Refer to chapters Speed Dial Memory and Phone Book.

Creating Phone Book Entries

Refer to chapters Speed Dial Memory and Phone Book.

Flash Time

The Flash relates to a specific time for which the line is interrupted in order to trigger certain switch functions. The Flash time defines the period of the interruption.

There are 10 times available for selection in the **Flash time** menu. Select the Flash time required for your country / PABX system.

1. Press the **MENU/↔** button.
2. Press the **▲/▼** buttons to select the **Flash time** menu.
3. Confirm the selection by pressing the **MENU/↔** button.
4. Press the **▲/▼** buttons to select the required flash time.
5. Confirm the selection by pressing the **MENU/↔** button.

Tip: For further information, refer to “Using the R Button” and Chapter “Operating in a PABX System”.

Ringling Melodies

There are 8 ringing melodies available for selection in the **Ring melody** menu.

1. Press the **MENU/↔** button.
2. Press the **▲/▼** buttons to select the **Ring melody** menu.
3. Confirm the selection by pressing the **MENU/↔** button.

4. Press the **▲/▼** buttons to select a ringing melody.
5. Confirm the selection by pressing the **MENU/↔** button.

Babycall

Use the **Babycall** menu to save a phone number which is then automatically dialed after pressing any button (except the **MENU/↔** button).

1. Press the **MENU/↔** button.
2. Press the **▲/▼** buttons to select the **Babycall** menu.
3. Confirm the selection by pressing the **MENU/↔** button.
4. Press the **▲/▼** buttons to select **Babycall on** or **Babycall off**.
5. Confirm the selection by pressing the **MENU/↔** button.

If you have selected **Babycall on**:

6. Enter the **babycall number** and confirm by pressing the **MENU/↔** button.

Display Contrast

There are 5 different settings available in the **Contrast adjust** menu.

1. Press the **MENU/↔** button.
2. Press the **▲/▼** buttons to select the **Contrast adjust** menu.
3. Confirm the selection by pressing the **MENU/↔** button.
4. Press the **▲/▼** buttons to select a setting.
5. Confirm the selection by pressing the **MENU/↔** button.

Date and Time

The **Date/Time** menu can be used to set the current date and time.

1. Press the **MENU/↔** button.
2. Press the **▲/▼** buttons to select the **Date/Time** menu.
3. Confirm the selection by pressing the **MENU/↔** button.
4. Press the **▲/▼** buttons to set the year.
5. Confirm the selection by pressing the **MENU/↔** button.
6. Press the **▲/▼** buttons to set the hour.
7. Confirm the selection by pressing the **MENU/↔** button.
8. Press the **▲/▼** buttons to set the minute.
9. Confirm the selection by pressing the **MENU/↔** button.
10. Press the **▲/▼** buttons to set the day.
11. Confirm the selection by pressing the **MENU/↔** button.
12. Press the **▲/▼** buttons to set the month.
13. Confirm the selection by pressing the **MENU/↔** button.

Long Distance Access Code

The **Long dist access** menu can be used to store a long distance access code (LDAC*). This unique 6–digit access code serves for accounting long distance calls and special call numbers to the respective users instead of being charged to the telephone subscriber. The telephone network infrastructure must support the function in order to use it. Contact your telephone provider for details.

Tip: This programming procedure is not normal within European countries.

1. Press the **MENU/↔** button.
2. Press the **▲/▼** buttons to select the **Long dist access** menu.

* LDAC = Long Distance Access Code.

3. Confirm the selection by pressing the **MENU/↔** button.
 4. Press the **▲/▼** buttons to select the first digit.
 5. Confirm the selection by pressing the **MENU/↔** button.
- Repeat the procedure to enter up to 6 digits.

Area Code

The **Set area code** menu can be used to store your area code. The effect of this setting is that calls received, with the area code defined, appear in the call list without the area code.

1. Press the **MENU/↔** button.
 2. Press the **▲/▼** buttons to select the **Set area code** menu.
 3. Confirm the selection by pressing the **MENU/↔** button.
 4. Press the **▲/▼** buttons to select the first digit.
 5. Confirm the selection by pressing the **MENU/↔** button.
- Repeat the procedure to enter up to 6 digits.

Language of the Menu Guidance

The **Select language** menu can be used to set the language for the menu guidance. There are 9 languages available for selection.



1. Press the **MENU/↔** button.
2. Press the **▲/▼** buttons to select the **Select language** menu.
3. Confirm the selection by pressing the **MENU/↔** button.
4. Press the **▲/▼** buttons to select a language.
5. Confirm the selection by pressing the **MENU/↔** button.

Tip: Press the **<☒** button to exit from a menu.


6. Telephoning



Telephoning

Taking a Call



1. The telephone rings, a call is received.
2. Pick up the receiver or press the  button to take the call. The call time indicator starts.
3. Replace the receiver or press the  button again to end the call.

Making a Call

1. Pick up the receiver or press the  button and wait for the dialling tone.
2. Dial the phone number. The call time indicator is started approx. 5 seconds after the first ringing tone.




It is also possible to make a call by dialling the number first and then lifting the receiver or pressing the  button. When entering the number, it is possible to correct wrong digits by pressing the  button.

Redialling






1. Pick up the receiver or press the  button.
2. Press the  button in order to redial the last number dialled.

The telephone stores up to 16 phone numbers which have been dialled.



Tip: When the memory is full, the oldest entry will subsequently be automatically overwritten.

1. Press the  button.
2. Press the  buttons to select a phone number.
3. Pick up the receiver or press the  button to dial the number.


Delete entries:

1. Press the  button.
2. Press the  buttons to select a phone number.
3. Press the  button to delete the entry currently selected.
4. Press the  button to select **End of list**.
5. Press the  button to return to Standby mode.

Putting a Call on Hold

1. Press the  button during a call and replace the receiver on-hook in order to put the call on hold.
2. Pick up the receiver or press the  button to resume the call.


Changing the Receiver Volume

On the inner side of the receiver is a sliding switch () which is used to set the receiver volume. This switch can be adjusted at any time to the volume required, even during a call.

Changing the Ringing Volume

Press the  button in order to adjust the volume of the ringing tone. There are 4 levels available for selection.

Changing the Loudspeaker Volume

Press the + button while the loudspeaker is switched on in order to adjust the volume. There are 4 levels available for selection.

Compiling the Call Time

Compiling of the call time is started approx. 5 seconds after the call has been taken or the phone number dialled. Even if the phone number dialled is engaged, the phone number and duration of the call are stored in the outgoing call memory.


Muting the Microphone

While a call is in progress, you can press the **VIP/|X** button to switch off the microphone. Press the button again to resume the call.

Using the R Button

If your telephone is connected to a PABX system, the **R** button is used during a call to enable consultation with other subscribers and/or to forward a call to them.

This function is also used by network operators to provide customers with various other services. For details, contact your telephone network operator.

1. Pick up the receiver or press the  button to make the call.
2. During the call, press the **R** button and dial the phone number of another subscriber in order to consult with him or forward the call to him.
3. Press the **R** button in order to take the initial call back following consultation
or
4. Replace the receiver to forward the call to the subscriber contacted.






Tip: The above information could vary according to the PABX system used. Please read the information provided in the manuals supplied with your PABX system.

Entering a Dialling Pause (P)

If the telephone is connected to a PABX, it may be necessary to enter a dialling pause. Press the **P** button after entering the digit following which a pause is required, e.g. 0 for an outside line (0P...). A **P** then appears in the display to represent the pause. A pause can also be programmed for entries in the phone book.

Dialling Phone Numbers from the List of Incoming Calls

The telephone automatically saves information on the last 44 incoming calls. Proceed as follows to dial a phone number from this call list:

1. Press the  or  button to open the call list.
2. Press the / buttons to select a phone number.
3. Pick up the receiver or press the  button to dial the number.





Tip: If a call from the same phone number is received several times, only the last call and time is displayed.

7. Speed Dial Memory and Phone Book






Speed Dial Memory and Phone Book

Up to 32 entries can be stored in the phone book. The names can be comprised of capital letters, spaces and special characters (buttons 0 to 9). Press the button to make corrections.





Saving Entries in the Phone Book

1. Press the **MENU**/ button.
2. Press the **▲/▼** buttons to select the **Phonebook input** menu.
3. Confirm the selection by pressing the **MENU**/ button.
4. Enter the phone number (max. 16 digits).
5. Confirm the entry by pressing the **MENU**/ button.
6. Enter the corresponding name (max. 16 characters).
7. Confirm the entry by pressing the **MENU**/ button.

Editing Entries in the Phone Book

1. Press the **MENU**/ button.
2. Press the **▲/▼** buttons to select the **Phonebook edit** menu.
3. Confirm the selection by pressing the **MENU**/ button.
4. Press the **▲/▼** buttons to select an entry.
5. Confirm the selection by pressing the **MENU**/ button.
6. Edit the phone number (max. 16 digits).
7. Confirm the entry by pressing the **MENU**/ button.
8. Edit the name (max. 16 characters).
9. Confirm the entry by pressing the **MENU**/ button.

Storing Numbers of Incoming Calls in the Phone Book




1. Press the **▲/▼** button to open the call list.
2. Press the **▲/▼** buttons to select an entry.
3. Press the **MENU**/ button.
4. The message **Store** appears in the display.
5. Press the  button.
6. Edit the phone number (max. 16 digits).
7. Confirm the entry by pressing the **MENU**/ button.
8. Enter the corresponding name (max. 16 characters).
9. Confirm the entry by pressing the **MENU**/ button.

Dialling Phone Numbers from the Phone Book

1. Press the  button.
2. Enter the initial letters
or
3. Press the **▲/▼** buttons to select an entry.
4. Pick up the receiver or press the  button.

7. Speed Dial Memory and Phone Book


Deleting an Entry from the Phone Book

1. Press the  button.
2. Enter the initial letters
or
3. Press the ▲/▼ buttons to select an entry.
4. Press the  button to delete the entry.
5. Press the ▲/▼ button to select **End of list**.
6. Press the  button to return to Standby mode.

Programming One-touch Dialling Keys (M1 to M2)

1. Enter a phone number
or
2. Press the ▲/▼ buttons to select an entry from the call list.
3. Press the MENU/⇨ button.
4. The message **Store** appears in the display.
5. Press the required one-touch dialling key.

Dialling with One-touch Dialling Keys (M1 to M2)



1. Press the required one-touch dialling key.
2. Pick up the receiver or press the  button.

Tip: The numbers programmed to the one-touch dialling keys cannot be deleted. The existing phone numbers are overwritten when new ones are saved.

Programming the Speed-dial Keys (0 to 9)

1. Enter a phone number
or
2. Press the ▲/▼ buttons to select an entry from the call list.
3. Press the MENU/⇨ button.
4. The message **Store** appears in the display.
5. Press the required digit key (0 to 9).

Dialling with the Speed-dialling Keys

1. Press the /⇨ button.
2. Press the required speed dialling key.
3. Pick up the receiver or press the  button.

Tip: The numbers programmed to the speed dialling keys cannot be deleted. The existing phone numbers are overwritten when new ones are saved.

8. Call Identification (CLIP)

Call Identification (CLIP)

This service must be enabled by your telephone network provider* in order that the phone number of the caller can appear in your telephone display and be saved.

The telephone can save information on up to 44 incoming calls, such as phone number (or name), date and time. When the memory is full, the **Memory full** message appears in the display. The last data record received overwrites the first (First In/First Out principle). Information on incoming calls not taken is saved.

If a call from the same number is received again, the existing data record is replaced by the new one.

Call List

All incoming calls are assigned to a data record number. It appears in the display. When a new call is received, the **NEW** icon appears in the display.

The **REP** icon appears when that caller has already called previously but the call was not taken.


 


Incoming calls can be deleted individually. To do this, press the <⊗> button.

* Enabling the function may be liable for costs.


Miscellaneous

Alarm

You can program an alarm in your telephone.


1. Press the **MODE**/ button.
2. The message **Alarm off** appears in the display.
3. Press the **▲/▼** buttons to select **Alarm on**.
4. Confirm the selection by pressing the **MODE**/ button.
5. Press the **▲/▼** buttons to set the hour.
6. Confirm the selection by pressing the **MODE**/ button.
7. Press the **▲/▼** buttons to set the minute.
8. Confirm the selection by pressing the **MODE**/ button.

Snooze

When the time set for the alarm is reached, press the **R/S** button so that the alarm will be issued again in 9 minutes. To switch the alarm off, press the **MODE**/ button and select **Alarm off**.




Voice Mail

The option of receiving voice mails must be enabled by the telephone network provider.

If a voice mail has been recorded, the  icon appears in the display. After the mail has been played, the icon disappears from the display.

Callback When Engaged

Tip: The function can operate differently depending on your network provider.

1. Enter the phone number and pick up the receiver or press the  button.
2. If the number is engaged, press the / button to end the connection.
3. As soon as the person called has replaced the receiver on-hook, the callback function is signalled.
4. Pick up your receiver and a connection is established.

Tip: If you receive another call in the meantime, the callback function is automatically terminated when an engaged status is detected.

9. Miscellaneous

Filter

You can programme a filter function for your telephone whereby the ringing tone for incoming calls is deactivated for a specific time (lunch break, important meeting, etc.).

1. Press the **VIP/|X** button.
2. The message **Filter start** appears in the display.
3. Press the **▲/▼** buttons to set the hour.
4. Confirm the selection by pressing the **MENU/↔** button.
5. Press the **▲/▼** buttons to set the minute.
6. Confirm the selection by pressing the **MENU/↔** button.
7. The message **Filter stop** appears in the display.
8. Press the **▲/▼** buttons to set the hour.
9. Confirm the selection by pressing the **MENU/↔** button.
10. Press the **▲/▼** buttons to set the minute.
11. Confirm the selection by pressing the **MENU/↔** button.
The filter is programmed for the set period of time.
12. The message **FILTER** appears in the display.
13. Press the **VIP/|X** button to switch the filter off.

Filter Properties

You can assign a filter property to the existing entries in the call list.

1. Press the **▲** or **▼** button to open the call list.
2. Press the **▲/▼** buttons to select a phone number.
3. Press the **☐/↔** button.
4. The message **Norm Vip Rej Esc** appears in the display.
5. Press the **▲/▼** buttons to switch a property off.
6. Press the **☐/↔** button again.
7. Press the **<☒** button to return to Standby mode.

The property selected determines the behaviour when the filter is switched on.

Tip: Entries which are not assigned have the property ESC.

NORM: When the filter is switched on, this call is signalled by 2 rings. Entries are not overwritten when the memory is full.


 


VIP: When the filter is switched on, this call is signalled by 4 rings. Entries are not overwritten when the memory is full.

REJ: When the filter is switched on, this call is not signalled at all. Entries are not overwritten when the memory is full.

ESC: When the filter is switched on, this call is not signalled at all. Entries are automatically overwritten when the memory is full.

Deleting Filter Entries

Before assigning a phone number to a different filter list, you must delete the existing entry in the “old” filter list. Proceed as follows to delete phone numbers from a filter list.

1. Press the ▲ or ▼ button to open the call list.
2. Press the ▲/▼ buttons to select a phone number.
3. Press the **MODE**/ button.
4. The message **Norm Vip Rej Esc** appears in the display.
5. Press the ▲/▼ buttons to switch a property off.
6. Press the **MODE**/ button again.
7. Press the ▲/▼ buttons to select the required phone number.
8. Press the  button to delete the entry.
9. Press the ▲/▼ button to select **End of list**.
10. Press the  button to return to Standby mode.

10. Operating in a PABX System / 11. Disassembly


Operating in a PABX System

The telephone may operate differently when connected to a PABX system as compared to connection as a main terminal. In the event of interference or malfunction, please contact your network operator or the retailer where you purchased the PABX system.

The following Flash times are available for selection (refer to Menu Structure):

80 ms
100 ms
110 ms
200 ms
300 ms
400 ms
500 ms
600 ms
800 ms
1000 ms

Disassembling

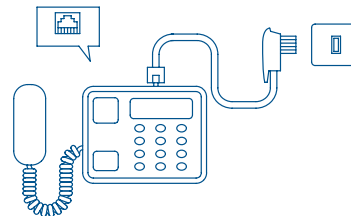

1. Disconnect the plugs from the corresponding sockets on the desk telephone.
2. Disconnect the telephone line plug from the telephone connection socket.

NOTE: If the telephone will not be used for a longer period, remove the batteries to prevent damage caused by the batteries leaking.

12. In Case of Problems / 13. Cleaning and Servicing

In Case of Problems

If you experience problems with the telephone, please refer to the information below first. The housing may only be opened and repair work completed by trained personnel. Failure to observe this annuls all rights to claims under the terms of guarantee.

Problem	Measures
The caller hears you poorly or not at all	<ul style="list-style-type: none">• Check the receiver and helix cable• Place the telephone on a stable, clean surface for the handsfree function
Display appears weak or not at all	<ul style="list-style-type: none">• Check the charge status of the batteries and their position in the battery compartment• Increase the contrast setting of the display• Avoid reflective light falling on the display
No call indication in the display	<ul style="list-style-type: none">• Check the charge status of the batteries and their position in the battery compartment• Has the CLIP service been enabled by your telephone provider?

Problem	Measures
No function	<ul style="list-style-type: none">• Unplug the telephone line plug, remove the batteries, disconnect all lines and install the telephone again as described
No ringing or dialling tones	<ul style="list-style-type: none">• Check the telephone connection line• Check the helix cable from the receiver• Check the telephone or PABX system switch line• Switch the filter off
Only one ring and the line is interrupted	<ul style="list-style-type: none">• Check the plug connections• Check whether other equipment is connected parallel in the same line and disconnect them, if necessary

Cleaning and Servicing

- Clean the housing surfaces with a soft, lint-free cloth.
- Do not use cleaning agents or solvents to clean the equipment.

14. Guarantee / 15. Technical Modifications and Data

Guarantee

In the case of a defect, please return the device together with the receipt and original packing material to the point-of-sale.

Technical Modifications

This operating instruction manual serves purely for information purposes. Its content is not part of any contract for sale.

All the data relates to nominal values. The equipment and options described may differ from country to country according to national requirements.

Technical Data

Feature	Value
Weight	610 g
Dimensions, incl. receiver (WxHxD)	165 mm x 82 mm x 198 mm
Batteries	3 x AAA 1.5 V
Telephone connection cable	TAE F-Kodierung
Dialling mode	Tone (DTMF) / Pulse
Flash times	80 ms, 100 ms, 110 ms, 200 ms 300 ms, 400 ms, 500 ms, 600 ms 800 ms, 1000 ms
Permissible ambient temperature	0 °C to 35 °C
Permissible relative humidity	20% to 75%
Permissible storage temperature	-10 °C to 50 °C
Permissible relative humidity in storage	15% to 95%

Index

A

- Alarm, 15
- Area code, 9

B

- Babycall, 8

C

- Call identification (CLIP), 14
- Call list, 14
- Callback when engaged, 15
- Changing the loudspeaker volume, 11
- Changing the receiver volume, 10
- Changing the ringing volume, 10
- Cleaning and servicing, 19
- Compiling the call time, 11

D

- Date and time, 8
- Deleting an entry from the phone book , 13
- Deleting filter entries, 17
- Disassembling, 18
- Display, 6
- Display contrast, 8

E

- Editing entries in the phone book, 12
- Entering a dialling pause, 11
- Equipment description, 5
- Exemption From Liability, 1

F

- Features, 4
- Filter, 16
- Filter properties, 16
- Flash time, 8

G

- Guarantee, 20

I

- Important Information, 3
- Important safety precautions, 1
- In case of problems, 19
- Installation, 2
- Intended use, 1
- Introduction, 1

L

- Language of the menu guidance, 9
- Long distance access code, 9

16. Index

M

- Making a calls, 10
- Menu structure, 7
- Muting the microphone, 11

O

- One-touch dialling keys, 13
- Operating elements and indicators, 5
- Operating in a PABX system, 18
- Other icons in the display, 6

P

- Package contents, 2
- Phone book, 12
- Positioning and connecting, 2
- Putting a call on hold, 10

R

- Redialling, 10
- Ringing melodies, 8

S

- Saving entries in the phone book, 12
- Significance of the symbols, 1
- Snooze, 15
- Speed dial memory , 12
- Speed dialling keys, 13

T

- Taking a call, 10
- Technical data, 20
- Technical modifications, 20
- Telephoning, 10

U

- Using the R button, 11

V

- Voice mail, 15



Konformitätserklärung/Declaration of Conformity

gemäß dem Gesetz über Funkanlagen und Telekommunikationseinrichtungen (FTEG) und der Richtlinie 1999/5/EG (R&TTE) in accordance with the Radio and Telecommunications Terminal Equipment Act (FTEG) and Directive 1999/5/EC (R&TTE Directive)

Olympia Business Systems Vertriebsgesellschaft mbH

Hersteller / Verantwortliche Person // Manufacturer / responsible person

erklärt, dass das Produkt: declares that the product: Corded Telephone 4210

Telekommunikations(Tk-)sendeinrichtung
Telecommunications terminal equipment Funkanlage
Radio equipment

Cordless Telephone, DECT-standard, intended for the connection
to the public telephone network

Geräteklasse 1
Equipment class 2

Verwendungszweck
Intended purpose

bei bestimmungsgemäßer Verwendung den grundlegenden Anforderungen des § 3 und den übrigen einschlägigen Bestimmungen des FTEG (Artikel 3 der R&TTE) entspricht.
complies with the essential requirements of § 3 and the other relevant provisions of the FTEG (Article 3 of the R&TTE Directive), when used for its intended purpose.

Gesundheit und Sicherheit gemäß § 3 (1) 1. (Artikel 3 (1) a))
Health and safety requirements pursuant to § 3 (1) 1. (article 3 (1) a))

angewendete harmonisierte Normen: Harmonised standards applied:

Safety: EN 60950-1: 2006

Schutzanforderungen in Bezug auf die elektromagnetische Verträglichkeit § 3 (1) 2, Artikel 3 (1) b))
Protection requirements concerning electromagnetic compatibility § 3(1)(2), Article 3(1)(b))
angewendete harmonisierte Normen: Harmonised standards applied:

EN 55022: 2006
EN 55024: 1998 + A2: 2003

Adresse: Address:
Olympia Business Systems GmbH
Weg zum Wasserwerk 10
45526 Hattingen
Germany

Datum: Date: 10. May 2011
Doc-Nr.: 2181, Rev.: 00
Unterschrift: Signature: Heinz Prygoda



Please note that the copyright for this operating instruction manual lies with Olympia and, therefore, may not be copied or sold. The data and information in the operating instruction manual is only intended for personal use.



All rights reserved.